


Manual, Assembly instruction: Brodit 854453

Center mount NOT for models with navigation screen. Compare the pictures with your car to match!

1.)

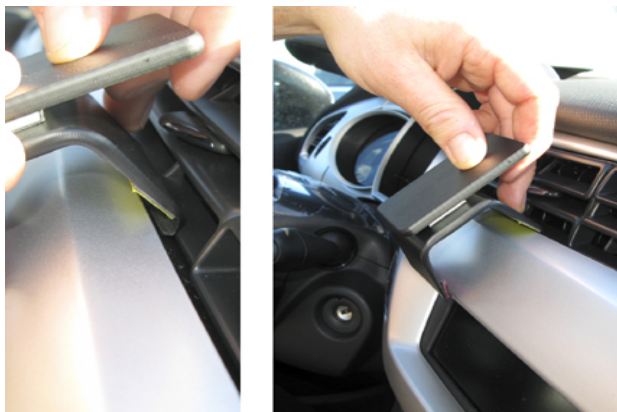

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Hook the angled edge on the upper part of the ProClip behind the panel surrounding the air vent.
2. Press the lower part of the ProClip forward so the angled edge snaps into the gap between the panel and the frame surrounding the display.
3. Press upward on the lower part of the ProClip so the angled edge goes all the way into the gap.
4. The ProClip is in place.