

Manual, Assembly instruction: Brodit 854606

Angled mount


1.)



2.)



3.)

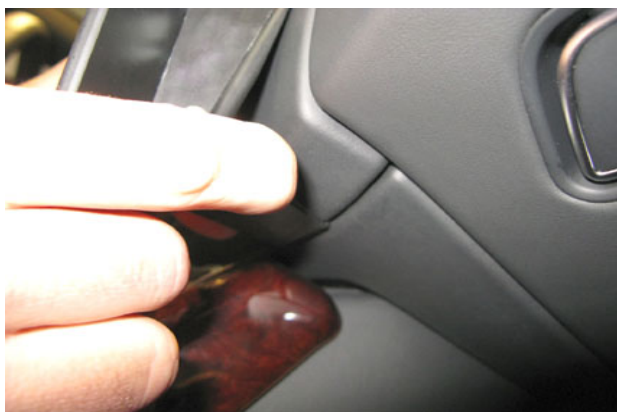

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the upper part of the ProClip into the gap between the trim and the dashboard.
2. Flip the lower part of the ProClip forward/downward so the angled upper edge hooks behind the trim.
3. Pull the lower part of the ProClip downward and press it forward. Release the pressure so the angled edge hooks into the gap in the dashboard.
4. The ProClip is in place.