


Manual, Assembly instruction: Brodit 854611

Center mount

1.)

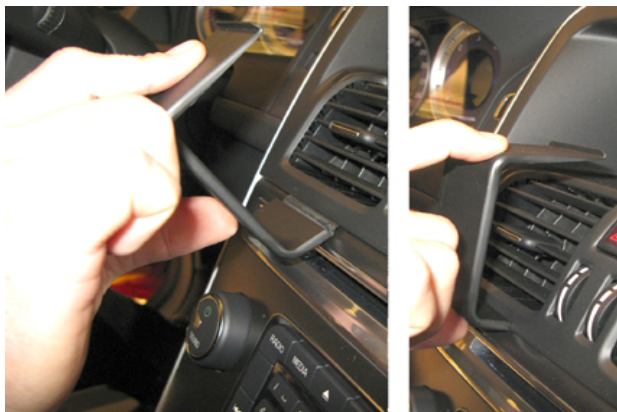

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the curved edge on the lower part of the ProClip into the gap between the frame surrounding the air vent and the control panel. Flip the ProClip upward/forward so the curved lower edge goes all the way into the gap and hooks behind the control panel.
2. Press the upper part of the ProClip downward and then forward into the upper part of the air vent. Keep the lower part of the ProClip in place in the same position, in the same time pull the upper part toward you so the gap under the frame surrounding the air vent is widened and the angled upper edge of the ProClip hooks into the gap under the frame surrounding the air vent.
3. This ProClip can be placed both on the left and the right air vent.
4. The ProClip is in place.