


Manual, Assembly instruction: Brodit 854622

Angled mount NOT for wood grain panel.

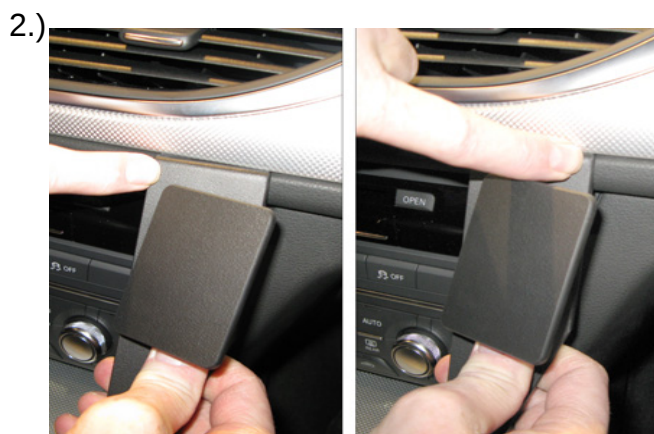

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the stereo and the center console frame, to widen the gap. Place it as low as possible in the gap. Remove the adhesive tape cover on the ProClip. Place the ProClip above the gap opener so the grooved vertical edge fits into the gap. Place your left index finger by the upper left corner of the ProClip, just to the left of it, to mark the position. Press the curved edge on the upper part of the ProClip into the gap between the trim and the dashboard, just to the right of your finger.

2. Flip the ProClip downward so the curved upper edge hooks behind the dashboard. In the same time: Press the upper part forward, alternately on the left/right side, so the curved edge goes all the way into the gap.

3. Press forward on the lower part of the ProClip so the grooved vertical edge goes into the gap above the gap opener. Press until you hear/feel it snaps into place. Pull out the gap opener.

4. The ProClip is in place.