

Manual, Assembly instruction: Brodit 854628

Center mount


1.)



2.)



3.)

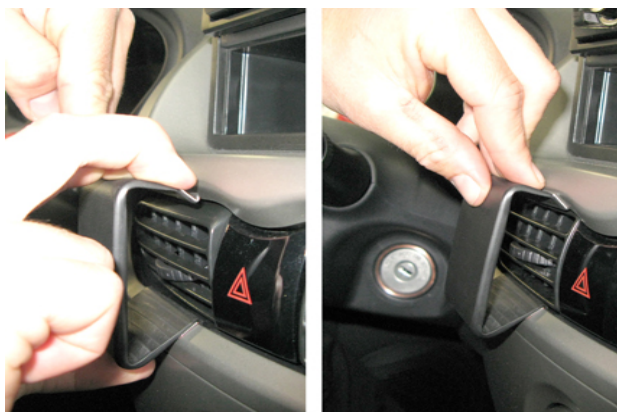

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the frame surrounding the air vent and the center console, to widen the gap. Peel off the adhesive tape covers on the ProClip.
2. Press the angled edge on the lower part of the ProClip into the gap next to the gap opener.
3. Press the upper part of the ProClip downward, and then forward. Hook the angled upper edge of the ProClip under the center console edge. Pull out the gap opener.
4. The ProClip is in place.