


Manual, Assembly instruction: Brodit 854712

Angled mount

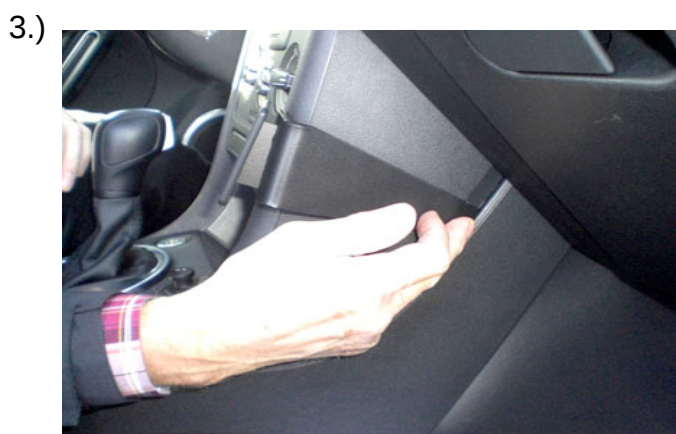

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol-pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the center console panel frame and the console edge, to widen the gap. Peel off the cover of adhesive tape on the ProClip. Press the angled edge on the left side of the ProClip into the gap below the gap opener. Pull out the gap opener.

2. Press the gap opener into the gap in the console sidewall. Press forward on the right side of the ProClip face plate so the ProClip flexes forward and the angled edge hooks into the gap next to the gap opener. Pull out the gap opener.

3. Press the right part of the ProClip firmly toward the console so the angled edge goes all the way into the gap.

4. The ProClip is in place.