


Manual, Assembly instruction: Brodit 854754

Angled mount ONLY for base and S models.

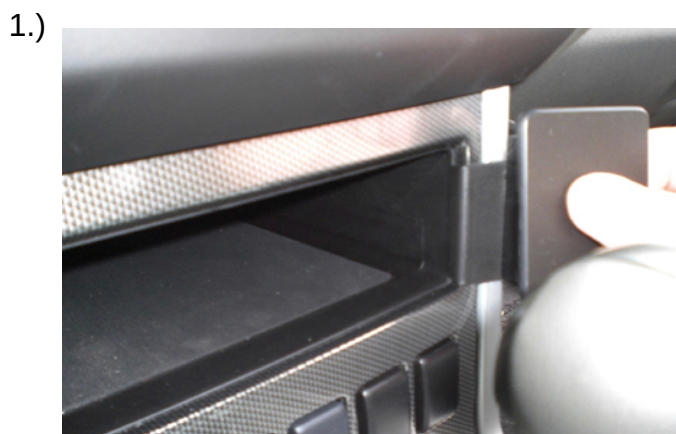

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the cover of adhesive tape on the ProClip. Place the angled edge on the left side of the ProClip over the center console edge by the coin box.

2. Press firmly forward on the right side of the ProClip so the angled edge goes into the gap in the center console sidewall. Press until you see or hear/feel it click into place.

3. The ProClip mount is in place.

4. The ProClip mount is in place.