


Manual, Assembly instruction: Brodit 854759

Center mount NOT for models with brown wood grain panel.

1.)

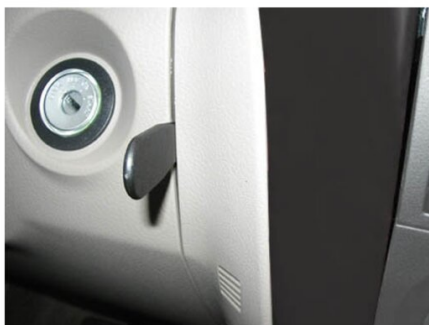

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. 1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap in the dashboard to widen the gap. Peel off the cover of adhesive tape on the ProClip. 2. Press the left part of the ProClip into the gap above the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner). 3. Press the two Gap Opener (Spaltöffner)s into the gap between the control panel and the surrounding frame above and below where the ProClip will insert. Press the right part of the ProClip into the gap between the Gap Opener (Spaltöffner)s. Pull out the gap openers. 4. The ProClip is in place.