


Manual, Assembly instruction: Brodit 854764

Angled mount

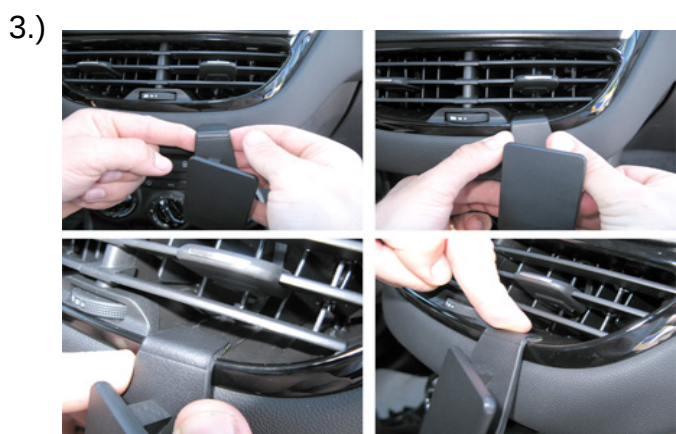

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the control panel and the dashboard.

2. Flip the upper part of the ProClip upward/forward so the angled lower edge hooks behind the control panel.

3. Pull the upper part of the ProClip toward you and upward, then press it forward. Hook the upper part of the ProClip over the lower edge of the air vent. Press downward on top of the ProClip so the adhesive tape attaches.

4. The ProClip is in place.