

Manual, Assembly instruction: Brodit 854804

Center mount


1.)



2.)



3.)

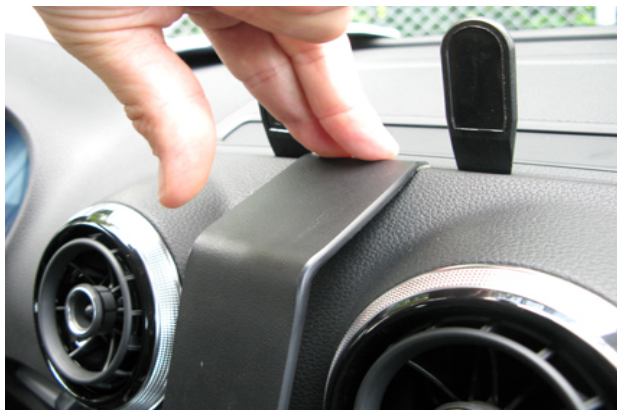

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap openers into the gap between the trim surrounding the buttons and the dashboard, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the gap openers. Press the lower part of the ProClip into the gap, in the same time flip the upper part upward/forward so the lower angled edge hooks behind the trim surrounding the buttons. Pull out the gap openers.

2. Press the gap openers into the gap between the dashboard and the frame surrounding the compartment. Pull the upper part of the ProClip upward and hook the angled edge into the gap between the gap openers.

3. Press down on top of the ProClip so the angled edge goes all the way into the gap. Pull out the gap openers.

4. The ProClip is in place.