


## Manual, Assembly instruction: Brodit 854812

Angled mount, High

1.)



2.)

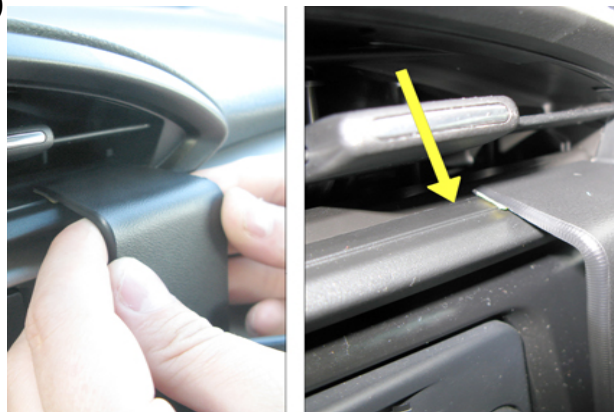

3.)



4.)



**Please read all of the instructions and look at the pictures before attaching the ProClip.**

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the upper section of the dashboard and the frame surrounding the control panel.
2. Pull the upper part of the ProClip upward and hook the angled edge into the gap between the air vent and the surrounding frame inside the lower part of the air vent.
3. Press downward on top of the ProClip so the angled edge goes all the way into the gap.
4. The ProClip is in place.