

Manual, Assembly instruction: Brodit 854881

Angled mount ONLY for PopStar.


1.)



2.)



3.)

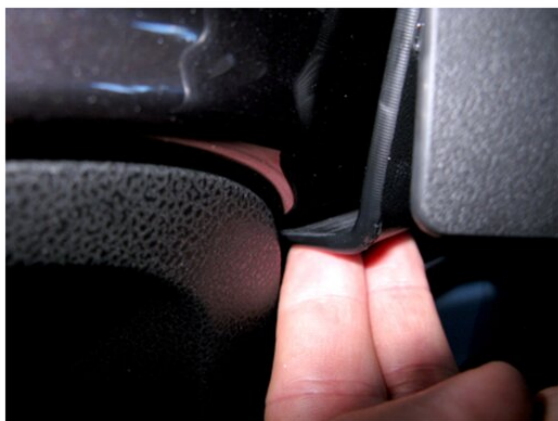

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip. Hook the angled upper edge of the ProClip into the gap between the panel on the dashboard and the shelf below the upper glove compartment.
2. Press downward on the top part of the ProClip, so the angled edge goes all the way into the gap.
3. Press forward + upward on the angled lower edge of the ProClip into the gap on the dashboard panel.
4. The ProClip is in place.