


Manual, Assembly instruction: Brodit 854910

Center mount, low

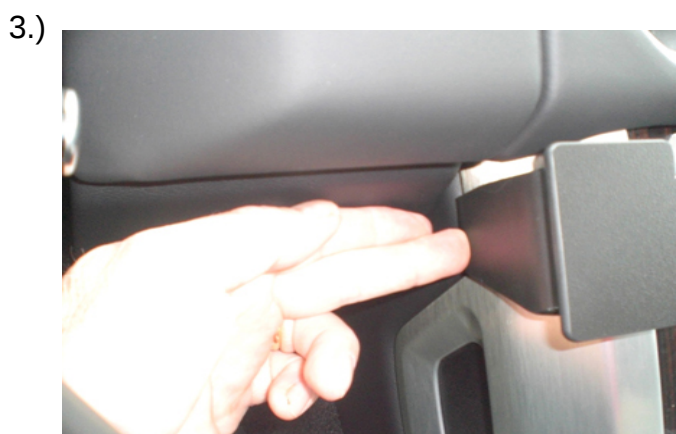

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the thin end of the enclosed gap opener into the gap between the console edge and the center console panel frame, to widen the gap. Press the angled edge on the right side of the ProClip into the gap above the gap opener. Pull out the gap opener.

2. Press firmly downward on the left side of the ProClip face plate so the mount flexes forward and the angled edge on the left side of the mount hooks around the console edge panel.

3. Place your finger against the ProClip and push to make sure the angled edge is properly hooked around the panel edge.

4. The ProClip is in place.