


Manual, Assembly instruction: Brodit 854916

Center mount

1.)

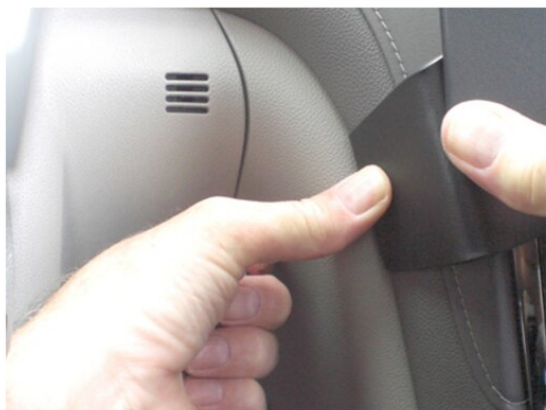

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the left side of the ProClip into the gap in the console sidewall.
2. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the stereo and the center console panel frame, to widen the gap. Push on the left side of the ProClip so it fleces toward the stereo and the angled edge hooks into the gap below the Gap Opener (Spaltöffner).
3. Press firmly forward on the right side of the ProClip to make sure the angled edge is all the way into the gap. Pull out the Gap Opener (Spaltöffner).
4. The ProClip is in place.