

Manual, Assembly instruction: Brodit 854972

Angled mount


1.)



2.)



3.)

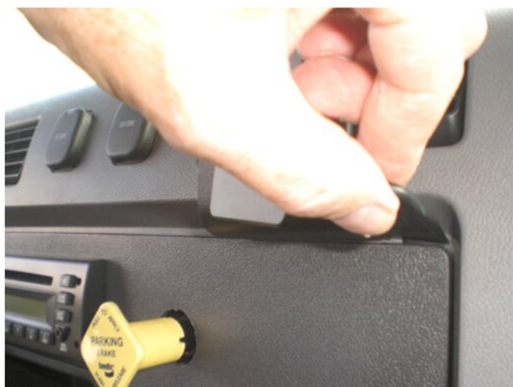

4.)



Please read the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the upper part of the ProClip up into the gap between the dash and the air vent house.

2. Press the thin angled edge on the enclosed Gap Opener (Spaltöffner) into the gap between the dash and the black panel, to widen the gap. Then push upward and forward on the ProClip so it flexes up and hooks into the gap next to the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).

3. Press the thin angled edge on the Gap Opener (Spaltöffner) into the gap between the dash and the black panel on the right side of the ProClip, to widen the gap enough to make sure the angled edge goes all the way into the gap. Pull out the Gap Opener (Spaltöffner).

4. The ProClip is in place.