


Manual, Assembly instruction: Brodit 854978

Center mount

1.)

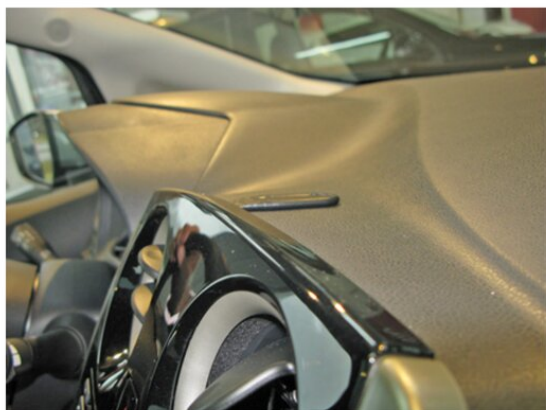

2.)



3.)



4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Press the enclosed Gap Opener (Spaltöffner) into the gap between the dashboard and the edge on the upper side of the center console, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip.
2. Press the top part of the ProClip into the gap next to the Gap Opener (Spaltöffner). Remove the Gap Opener (Spaltöffner).
3. Press downward on the bottom part of the ProClip and hook the angled lower edge into the gap surrounding the stereo.
4. The ProClip is in place.