


Manual, Assembly instruction: Brodit 854989

Center mount NOT for Sony Stereo.

1.)



2.)

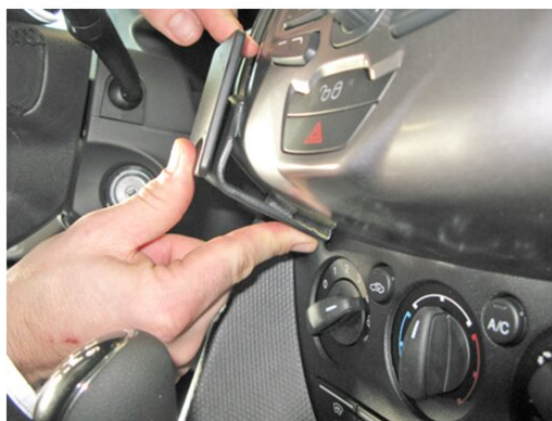

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Hook the angled edge of the upper part of the ProClip over the lower edge of the air vent.
2. Press the angled edge on the lower part of the ProClip into the gap between the trim and the panel surrounding the stereo.
3. Press all of the angled lower edge upward into the gap.
4. The ProClip is in place.