

Manual, Assembly instruction: Brodit 855034

Angled mount ONLY for models with a seam on the back side of the passenger assist handle.


1.)




2.)



3.)

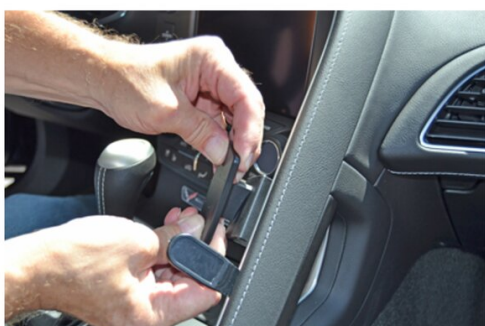

4.)

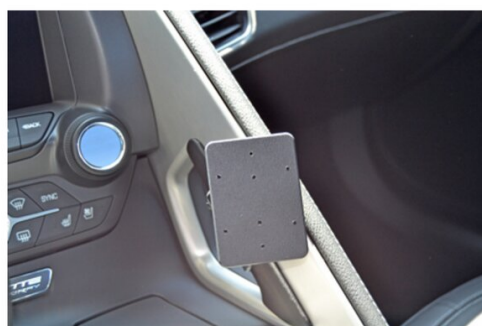

Please read the instructions and look at the pictures before installing the ProClip. 1. Insert the left angled edge of the ProClip into the seam between the two padded panels on the back side of the center console pillar. Adjust placement or location of ProClip on the pillar if desired. 2. Press the thin end of the enclosed Gap Opener (Spaltöffner) between the padded part of the center console pillar and the plastic trim piece on the drivers side of the pillar, to widen the gap. 3. Place your fingers behind the face plate of the ProClip and flex + hook the angled right edge of the ProClip into the gap next to the Gap Opener (Spaltöffner). Remove the Gap Opener (Spaltöffner). 4. The ProClip is in place.