

Manual, Assembly instruction: Brodit 855042

Center mount


1.)



2.)



3.)

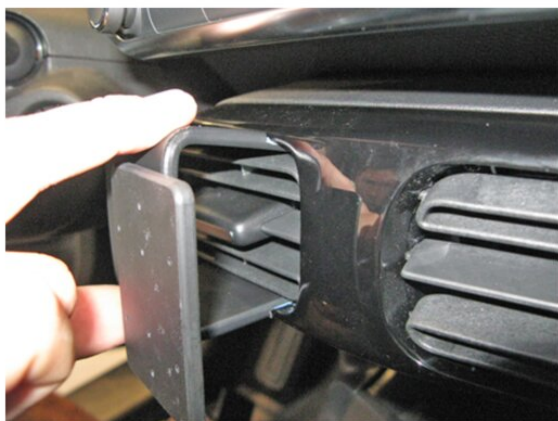

4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip. Insert the milled lower edge of the ProClip into the lower part of the air vent.
2. Press the upper part of the ProClip downward so it can go into the upper part of the air vent, at the same time as the adhesive tape at the bottom attaches properly.
3. Insert the milled upper edge of the ProClip into the upper edge of the air vent. Make sure the adhesive tape attaches properly.
4. The ProClip is in place.