

Manual, Assembly instruction: Brodit 855051

Angled mount ONLY for models with ACC.


1.)



2.)



3.)

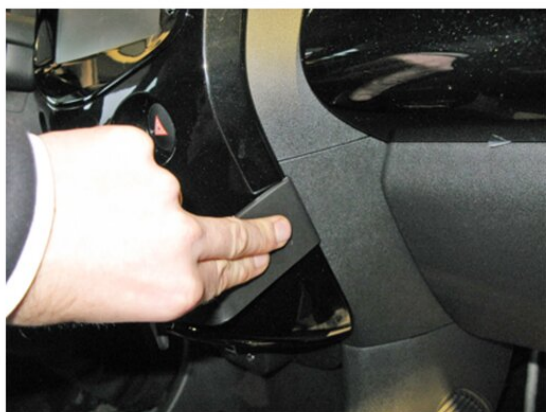

4.)



Please read the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Insert the thin end of the enclosed Gap Opener (Spaltöffner) by the edge of the frame surrounding the center console control panel, to widen the gap. Peel off the adhesive tape cover on the ProClip.
2. Insert the angled left edge of the ProClip into the gap next to the Gap Opener (Spaltöffner). Push inward + rightward on the ProClip so the angled edge goes all the way into the gap. Remove the Gap Opener (Spaltöffner).
3. Press forward on the right part of the ProClip so the angled edge hooks into the gap on the side of the center console.
4. The ProClip is in place.