


Manual, Assembly instruction: Brodit 855088

Angled mount

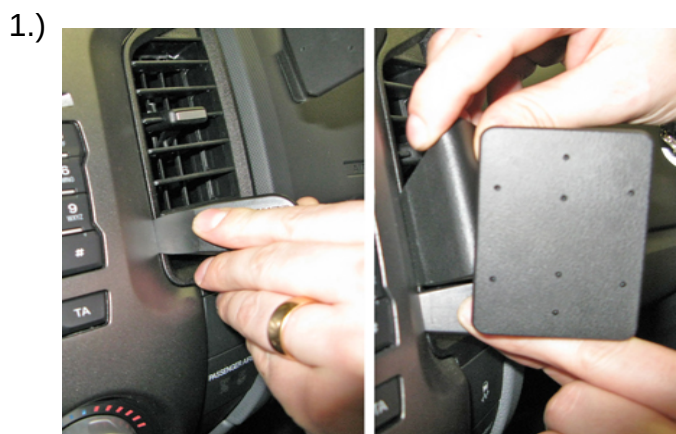

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the thin end of the enclosed gap opener into the gap between the frame surrounding the air vent and the control panel, to widen the gap. Press the gap opener further into the gap and carefully prize the gap wider. In the same time: Press the angled edge on the left part of the ProClip into the gap above the gap opener. Pull out the gap opener.

2. Press the gap opener into the gap between the frame surrounding the air vent and the dashboard, above the ProClip.

3. Press the ProClip rightward and forward so the angled edge on the right part goes all the way into the gap below the gap opener. Pull out the gap opener.

4. The ProClip is in place.