


Manual, Assembly instruction: Brodit 855092

Center mount

1.)



2.)

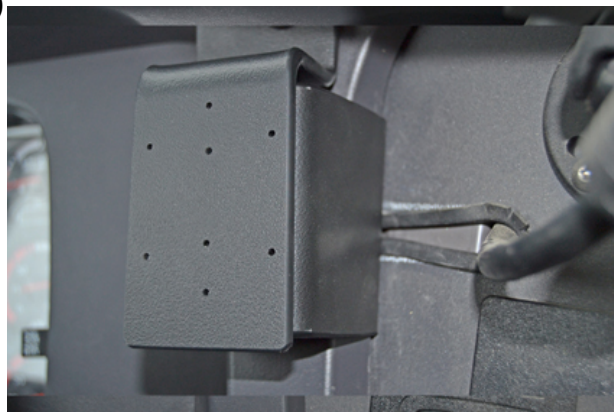

3.)



4.)



Please read the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip will be installed. Remove the screw in the dashboard as shown in the photo. Press the thin end of the enclosed gap opener into the gap between the center instrument panel and the panel frame, to widen the gap. Peel off the adhesive tape cover on the ProClip.

2. Align the hole in the ProClip with the hole in the dashboard where the screw was removed. Insert the screw into the hole again and tighten it. Press forward on the right side of the ProClip so the angled edge goes into the gap next to the gap opener. Remove the gap opener.

3. Press the thin end of the gap opener into the gap between the gauge panel and the surrounding frame, to widen the gap. Push forward on the left side of the ProClip so the angled edge goes into the gap next to the gap opener. Remove the gap opener.

4. The ProClip is in place.