


## Manual, Assembly instruction: Brodit 855093

Center mount

1.)

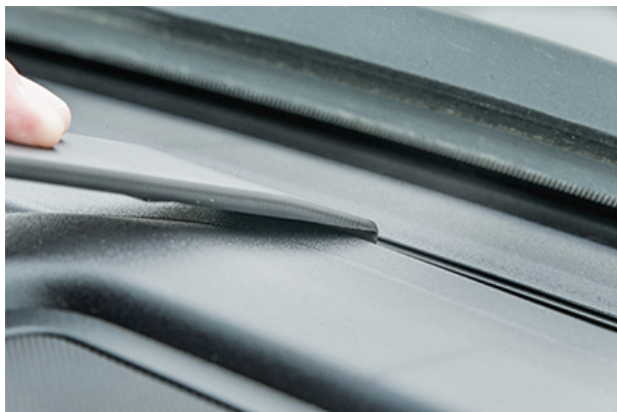

2.)



3.)



4.)



**Please read the instructions and look at the pictures before installing the ProClip.**

**1.** The mount comes in two parts that must be fastened together. Making sure the smooth side of the plastic is facing down; fit the two halves together. Fasten the top plate onto the mount using the included screws.

**2.** Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape cover on the ProClip. Press the angled upper edge of the ProClip into the seam between the top part of the dash and the inner part of the defroster vent.

**3.** Pull the ProClip toward you, flexing the lower angled edge. Insert the lower angled edge into the top of the right center airvent. Press forward on the ProClip to make sure the adhesive tape properly attaches. This ProClip comes with an optional extension plate. The extension plate can be used to add extra clearance in vehicles with column shift. Use the included self-tapping screws to attach the extension plate to the ProClip face plate.

**4.** The ProClip is in place.