


Manual, Assembly instruction: Brodit 855096

Center mount NOT for carbon fiber panel and Bang Olufsen stereo.

1.)

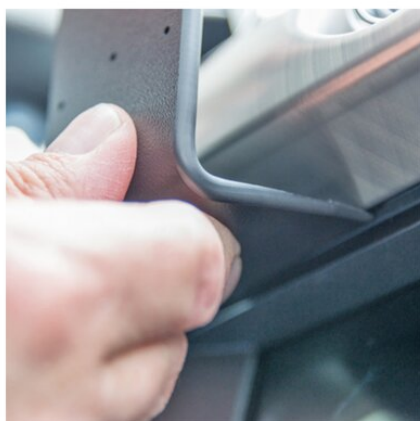

2.)



3.)



4.)



Please read the instructions and look at the pictures before installing the ProClip.

1. Insert the lower angled edge of the ProClip into the gap between the panel surrounding the air vents and the surrounding center console.
2. Press the upper part of the ProClip forward until the upper angled edge goes into the gap between the panel surrounding the air vents and the speaker grill. If needed: insert the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the panel surrounding the air vents and the speaker grill, to widen the gap.
3. The ProClip can also be placed on the right side of the dash.
4. The ProClip is in place.