


Manual, Assembly instruction: Brodit 855097

Center mount

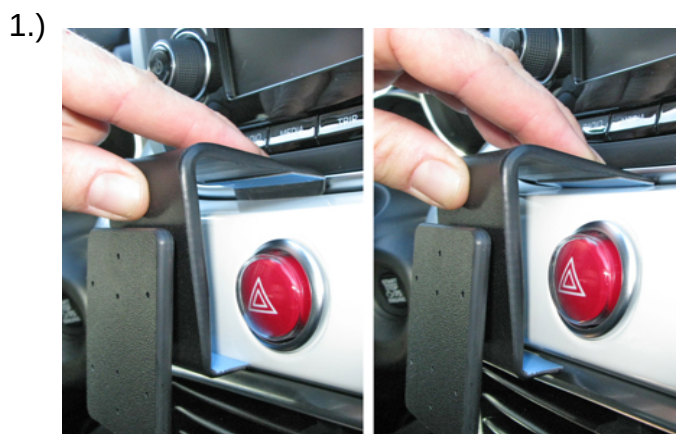

Please read the instructions and look at the pictures before installing the ProClip. This ProClip can also be placed on the passengers side.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip. Press the angled upper edge of the ProClip into the gap between the paneling and the remainder of the center console.

2. Pull the bottom part of the ProClip downward so that the angled bottom part can hook around the silver frame surrounding the air vent.

3. Insert the angled lower part of the ProClip into the upper part of the airvent so the adhesive tape attaches to the silver frame surrounding the air vent.

4. The ProClip is in place.