

Manual, Assembly instruction: Brodit 855103

Center mount


1.)



2.)



3.)

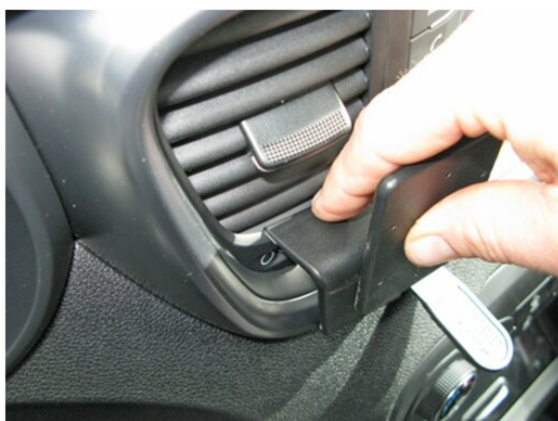

4.)



Please read the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap between the trim surrounding the center control panel and the remaining dashboard, to widen the gap. Remove the adhesive tape cover on the ProClip. Insert the lower edge of the ProClip into the gap next to the Gap Opener (Spaltöffner). Remove the Gap Opener (Spaltöffner).
2. Hook the upper part of the ProClip into the gap on the lower edge of the air vent.
3. Press downward on the upper edge of the ProClip to make sure the adhesive tape fastens properly.
4. The ProClip is in place.