


Manual, Assembly instruction: Brodit 855133

Center mount ONLY for models with open compartment, NOT for models with compartment with lid

1.)

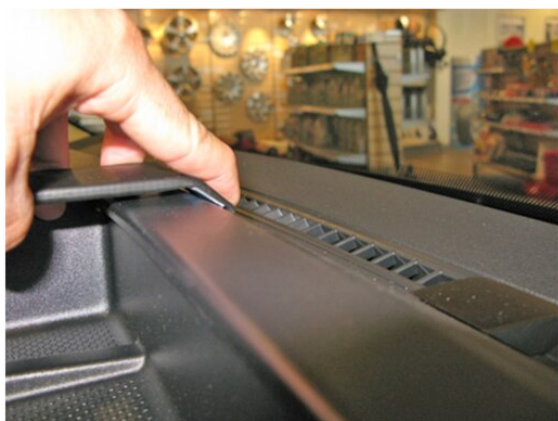

2.)



3.)



4.)



Please read all the instructions and look at the pictures before installing the ProClip. This ProClip can also be placed on the right side of the dashboard.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip. Press the angled upper edge of the ProClip into the gap between the defroster vent and the top of the dashboard.
2. Pull the lower part of the ProClip toward you.
3. Hook the angled lower edge of the ProClip around the dashboard overhang.
4. The ProClip is installed.