


Manual, Assembly instruction: Brodit 855135

Center mount ONLY for Comfort Dashboard WITHOUT a lid on the middle storage pocket.

1.)



2.)

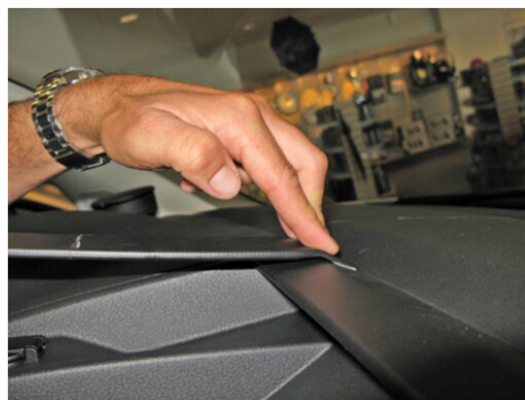

3.)



4.)



Please read all of the instructions and look at the pictures before installing the ProClip. Important! This ProClip will cover the 12V socket on top of the dash, there will be approximately 40mm between the socket and the ProClip. The ProClip can also be placed on the right airvent.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape covers on the ProClip. Insert the angled upper edge of the ProClip into the gap dividing the top part of the dashboard.

2. Press the angled edge all the way into the gap.

3. Pull the lower part of the ProClip toward you and hook the angled lower edge around the upper edge of the air vent.

4. The ProClip is in place.