

Manual, Assembly instruction: Brodit 855141

Center mount


1.)



2.)



3.)

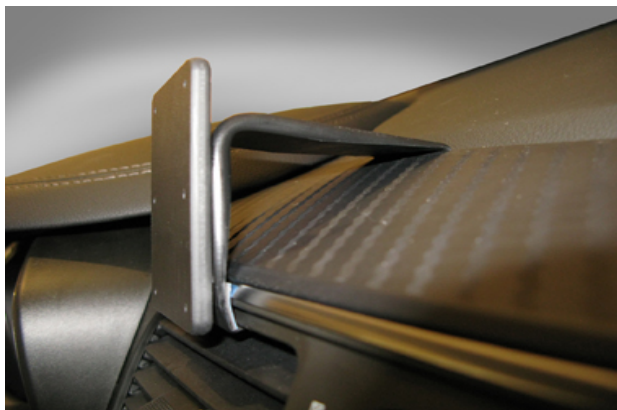

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap on top of the dashboard, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the ProClip. Press the angled edge on the upper part of the ProClip into the gap next to the gap opener. Press downward on the upper edge on the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.

2. Place your fingers behind the bottom part of the mounting plate and pull the lower edge of the ProClip toward you and downward. Hook the angled edge on the lower part under the upper edge of the air vent.

3. The ProClip mount is in place.

4. The ProClip mount is in place.