


Manual, Assembly instruction: Brodit 855172

Center mount

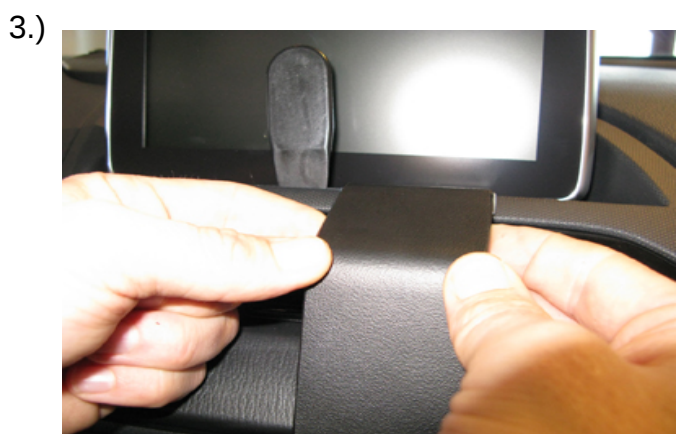

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the frame surrounding the climate control panel and the dashboard, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip.

2. Press the angled edge on the lower part of the ProClip into the gap next to the gap opener. Press upward on the lower part of the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.

3. Press the gap opener into the gap in the dashboard in front of the display. Pull the upper part of the ProClip upwards and hook the angled edge into the gap next to the gap opener. Press downwards on top of the ProClip so the angled edge goes all the way into the gap and the adhesive tape attaches. Pull out the gap opener.

4. The ProClip is in place.