

Manual, Assembly instruction: Brodit 855178

Angled mount


1.)



2.)



3.)

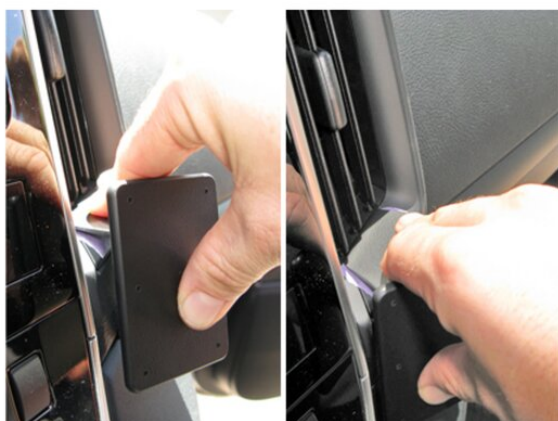

4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the thin end of the enclosed Gap Opener (Spaltöffner) into the gap dividing the left part of the center console, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape cover on the ProClip. Point the air vent flaps rightward.
2. Insert the angled lower edge of the ProClip into the gap next to the Gap Opener (Spaltöffner).
3. Move the ProClip forward + upward so the angled upper edge hooks into the gap on the lower inside of the airvent. Press downward on the upper part of the ProClip so the adhesive tape fastens properly.
4. The ProClip is in place.