

Manual, Assembly instruction: Brodit 855192

Angled Mount


1.)



2.)



3.)

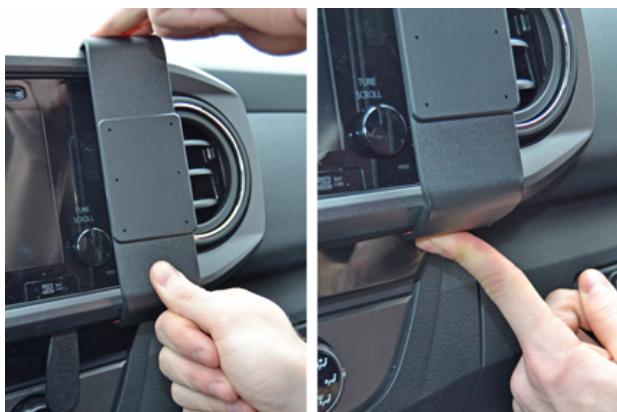

4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the thin end of the enclosed gap opener into the gap between the lower frame around the center display and the panel below, to widen the gap.

2. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape cover on the ProClip. Hook the angled upper edge of the ProClip around the upper edge of the frame surrounding the center display.

3. Press the lower edge of the ProClip forward/downward so the angled lower edge goes into the gap next to the gap opener. Press the lower edge of the ProClip upward so the angled edge goes all the way into the gap. Remove the gap opener.

4. The ProClip is in place.