

Manual, Assembly instruction: Brodit 855209

Angled mount


1.)



2.)



3.)

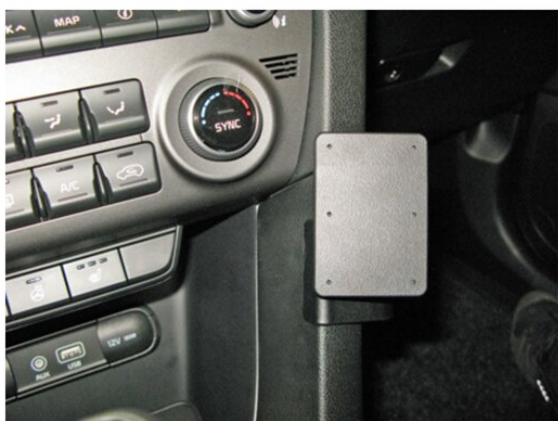

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed Gap Opener (Spaltöffner) into the gap in the center console sidewall, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Hook the left edge on the ProClip over the center console frame.
2. Press forward on the right side of the ProClip so the angled edge hooks into the gap above the Gap Opener (Spaltöffner). Pull out the Gap Opener (Spaltöffner).
3. The ProClip mount is in place.
4. The ProClip mount is in place.