


Manual, Assembly instruction: Brodit 855260

Center mount

1.)



2.)

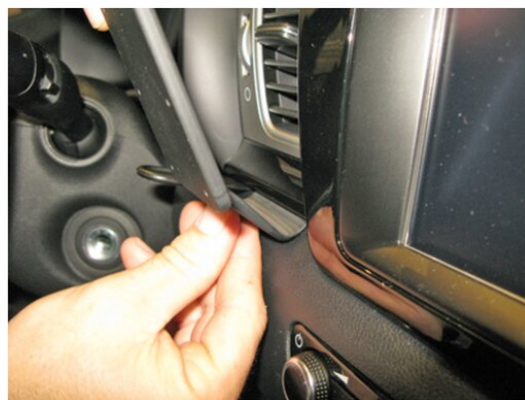

3.)



4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the thin end of the enclosed Gap Opener (Spaltöffner) into the gap below the trim under the air vent, to widen the gap.
2. Insert the curved lower edge of the ProClip into the gap next to the Gap Opener (Spaltöffner). Push forward on the upper part of the ProClip so the lower curved edge hooks behind the panel. Remove the Gap Opener (Spaltöffner).
3. Press the Gap Opener (Spaltöffner) into the gap above the air vent, to widen the gap. Pull the top part of the ProClip upward and hook the angled upper edge into the gap next to the Gap Opener (Spaltöffner). Remove the Gap Opener (Spaltöffner).
4. The ProClip is in place.