

Manual, Assembly instruction: Brodit 855266

Center mount


1.)



2.)



3.)

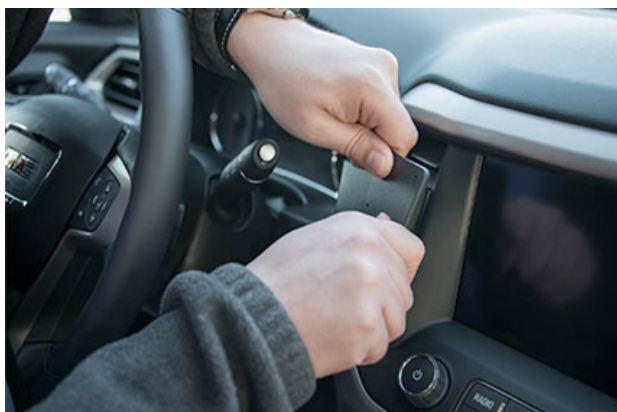

4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Insert the thin end of the gap opener into the gap between the silver frame surrounding the center console and the black frame by the left air vent, to widen the gap. Remove the adhesive tape covers on the ProClip.
2. Insert the angled left edge of the ProClip into the gap above the gap opener. The upper edge of the ProClip should be placed where the vent starts to angle to the right.
3. Flex the right edge of the ProClip leftward and hook the angled right edge around the right inside edge of the vent.
4. The ProClip is in place.