


Manual, Assembly instruction: Brodit 855277

Center mount

1.)



2.)

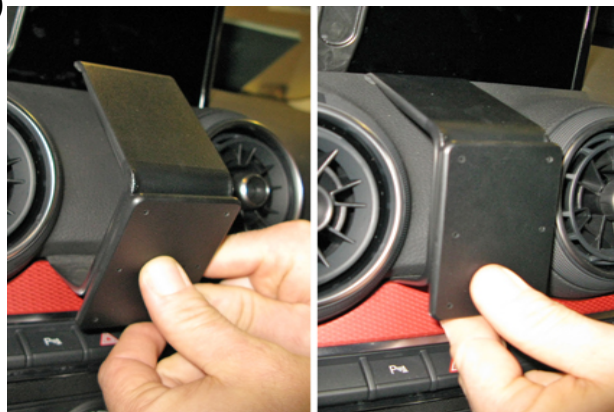

3.)



4.)



Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the thin end of the enclosed gap opener into the gap between the frame surrounding the information display and the dashboard, to widen the gap.
2. Press the angled lower edge of the ProClip into the gap between the panel surrounding the control panel and the dashboard. Push the upper part of the ProClip upward/forward so the angled lower edge hooks behind the panel.
3. Insert the angled upper edge of the ProClip into the gap next to the gap opener. Remove the gap opener.
4. The ProClip is in place.