

Manual, Assembly instruction: Brodit 855279

Angled mount


1.)



2.)



3.)

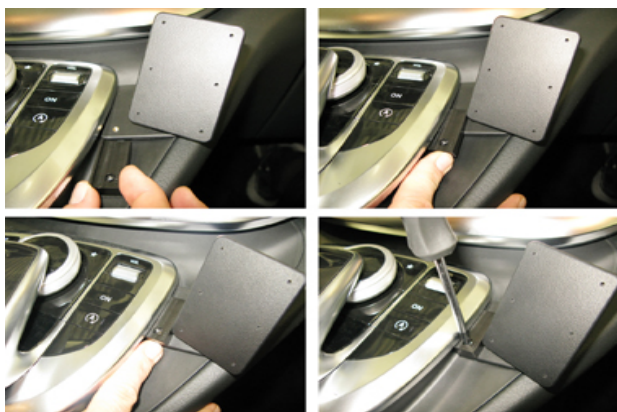

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip consists of two parts: Part 1. Attaching plate. Part 2. Attaching part (the smallest part)

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the panel and the center console side wall, just below the upper right corner of the gap. Peel off the adhesive tape covers on Part 1. Press the angled right edge on Part 1 into the gap below the gap opener.

2. Adjust the position so the lower edge of Part 1 is aligned with the seam between the buttons, same position as shown in the picture. Pull out the gap opener.

3. Place the front corner of the angled edge on Part 2 into the gap between the frame surrounding the control panel and the surrounding panel. Press Part 2 forward in the gap so the angled edge goes all the way into the gap and the hole is placed over the hole in Part 1. Attach Part 2 onto Part 1 with the enclosed screw.

4. The ProClip is in place.