

Manual, Assembly instruction: Brodit 855296

Center mount


1.)



2.)



3.)

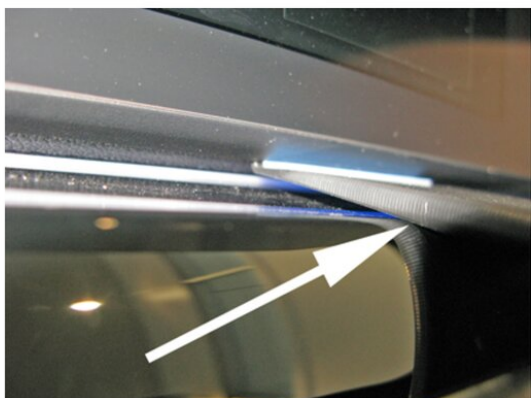

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. This ProClip can be placed also on the right side of the dash.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Insert the angled lower edge of the ProClip into the gap underneath the panel surrounding the air vents.

2. Keep pressing the lower edge into the gap and at the same time press downward on the upper edge of the ProClip. Press downward + forward until the edge bends downward and the angled upper edge hooks behind the information display.

3. Note that the ProClip rests slightly onto the dash.

4. The ProClip is in place.