


Manual, Assembly instruction: Brodit 855369

Center mount

1.)



2.)

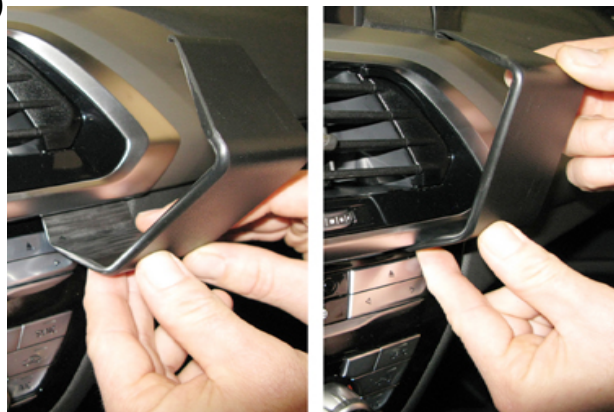

3.)



4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin end of the enclosed gap opener into the gap between the frame surrounding the air vent and the control panel.

2. Press the S-shaped lower edge on the ProClip into the gap between the frame surrounding the air vent and the control panel. Press/Flip the ProClip forward/upward so the S-shaped lower edge hooks behind the control panel.

3. Hook the angled edge on the upper part of the ProClip into the gap next to the gap opener. Press downward on top of the ProClip so the angled edge goes all the way into the gap. Pull out the gap opener.

4. The ProClip is in place.