



855407 ProClip

Center mount

Keep your device within easy sight and reach in your car! The ProClip makes it easier and safer to use handheld devices in vehicles. The ProClip is a mounting bracket that you attach to the dashboard of your car. Onto the ProClip, you can install any accessory, e.g. a holder for mobile phone or other communication device.

The ProClip is car specific, it is customized for each car model and has a perfect fit. The ProClip offers a firm mounting platform and is available in multiple positions for most vehicles. Discreet design that blends in well with the interior. Safe, neat and convenient!

The ProClip is easy to install, you can do it in a minute! You simply snap the ProClip into place in gaps in the interior, you do not need to drill holes or use special tools or dismantle the dashboard. Detailed mounting instructions included. The ProClip has predrilled AMPS holes for easy installation of a holder. Made of high grade ABS/Acetal plastic. Color: Black. Developed and produced in Sweden.

- Do you want to be able to switch between several holders on the same ProClip? Please see Brodit's MultiMoveClip.
- Are you installing larger devices or heavier equipment? Please see Brodit's Extra Strength Mounting Platforms and Pedestal Mounts.


EAN: 7320288554075

Item no 855407 fits:

- Lotus Elise 12-20 (For all countries)
- Lotus Exige 12-20 (For all countries)

INSTALLATION INSTRUCTIONS

1.

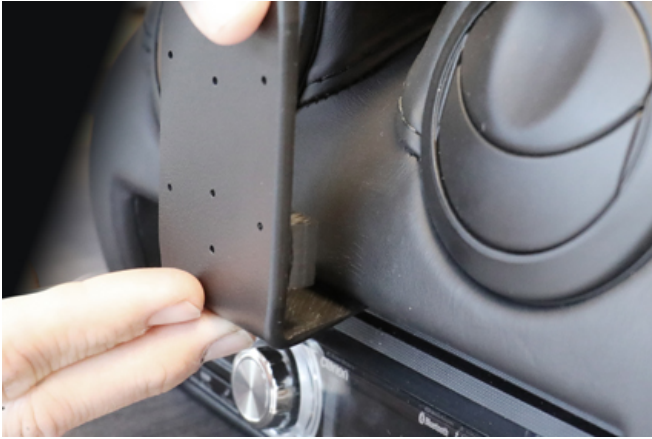

2.



3.



4.



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Press the thin lower edge on the ProClip into the gap between the dashboard and the frame surrounding the stereo.
 2. Pull the upper part of the ProClip upward so the angled edge is free and does not touch/scratch the dashboard. Press the upper part of the ProClip forward so the angled edge is placed above the gap on top of the dashboard between the air vents.
 3. Hook the angled edge on the upper part of the ProClip into the gap on top of the dashboard between the air vents. Press down on top of the ProClip so the angled edge goes all the way into the gap.
 4. The ProClip is in place.
-