


Manual, Assembly instruction: Brodit 855468

Center mount

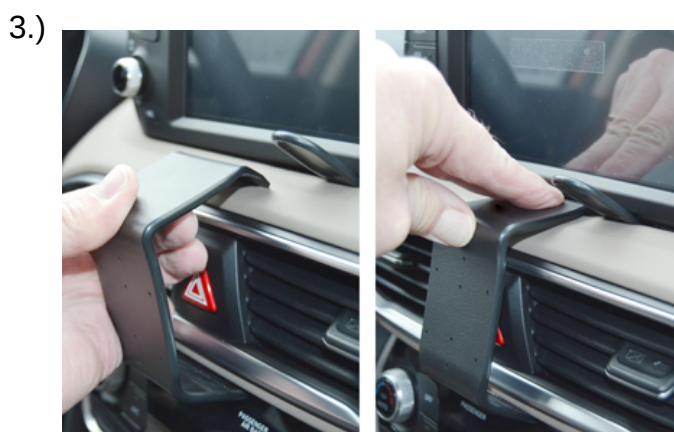

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the dashboard and the frame surrounding the display, to widen the gap. Peel off the adhesive tape cover on the ProClip.
2. Press the lower edge on the ProClip into the gap between the control panel and the dashboard overhang.
3. Press the upper part of the ProClip upward and forward. Hook the upper part of the ProClip into the gap next to the gap opener. Press down on top of the ProClip so the angled edge goes all the way into gap. Pull out the gap opener.
4. The ProClip is in place.