


Manual, Assembly instruction: Brodit 855538

Center mount

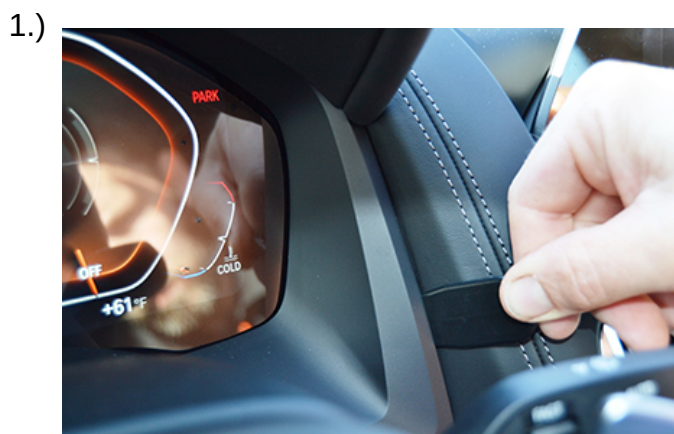

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape cover on the the ProClip. Press the thin edge of the enclosed gap opener into the gap between the panel surrounding the instrument panel and the dashboard, to widen the gap.
2. Insert the thin left edge of the ProClip into the gap next to the gap opener. Pull out the gap opener.
3. Press the edge of the ProClip into the gap, at the same time as you rotate the ProClip to the right. Hook the right edge of the ProClip over the padded edge of the center console.
4. The ProClip is in place.