


Manual, Assembly instruction: Brodit 855547

Angled mount

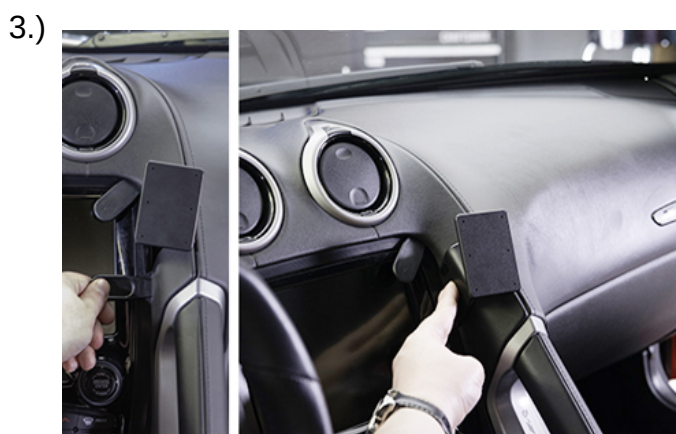

Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap openers into the gap between the center console and the dashboard, to widen the gap. Peel off the adhesive tape covers on the ProClip.

2. Press the angled edge on the right side of the ProClip into the gap between the gap openers. Pull out the gap openers.

3. Press the gap openers into the gap between the console frame and the frame around the display. Press the left edge of the ProClip into the gap between the gap openers. Pull out the gap openers.

4. The ProClip is in place.