

Manual, Assembly instruction: Brodit 855586

Center mount ONLY for models with 8,2" or 10,2" display.


1.)



2.)



3.)

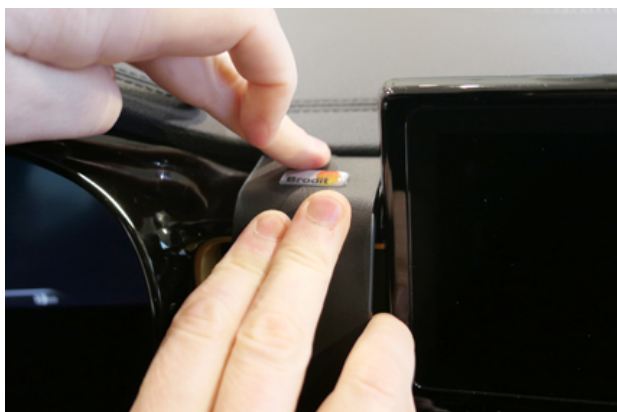

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip. Press the angled edge on the lower part of the ProClip into the gap between the center console frame and the dashboard.
2. Press the ProClip upward and forward and hook the angled upper edge into the gap between the center console frame and the dashboard top.
3. Press down on top of the ProClip so the angled edge goes all the way into the gap.
4. The ProClip is in place.