

Manual, Assembly instruction: Brodit 855633

Center mount


1.)



2.)



3.)

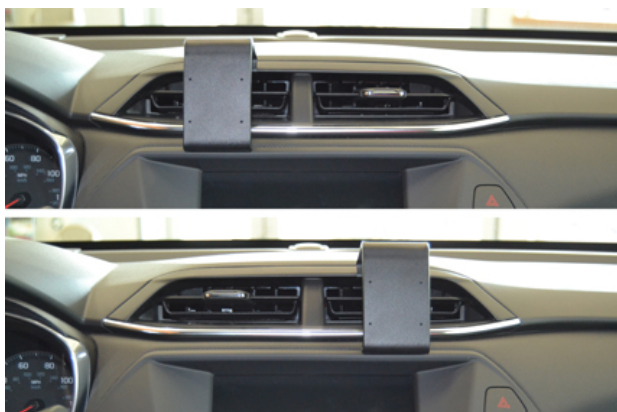

4.)



Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder & equipment is to be attached after the ProClip is in place.

1. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Press the thin end of the enclosed gap opener into the gap between the frame around the display and the padded dashboard, to widen the gap. Peel off the adhesive tape cover on the ProClip. Insert the lower edge of the ProClip into the gap next to the gap opener. Pull out the gap opener.

2. Press downward on the top of the ProClip and hook the top edge under the air vent frame.

3. This ProClip can also be placed on the left and the right air vent.

4. The ProClip is in place.