


Manual, Assembly instruction: Brodit 855639

Center mount

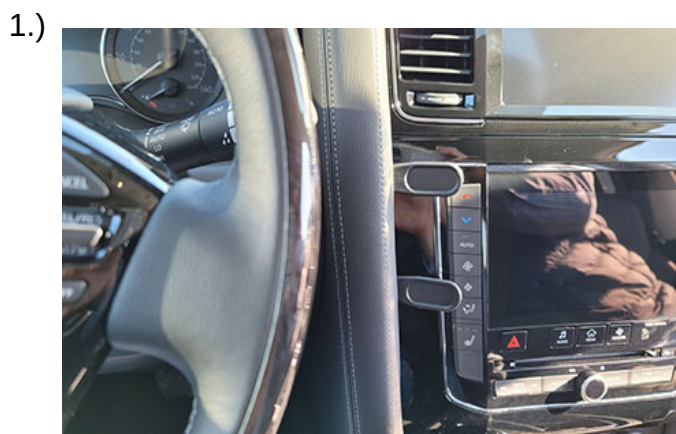

Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder & equipment is to be attached after the ProClip is in place.

1. Press the thin end of the enclosed gap opener into the gap between the control panel and the padded frame, to widen the gap. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Peel off the adhesive tape covers on the ProClip.

2. Press the angled edge on the right part of the ProClip into the gap between the gap openers.

3. Press the left part of the ProClip forward so the grooved edge hooks into the gap between the padded frame and the dashboard. Pull out the gap openers.

4. The ProClip is in place.