


Manual, Assembly instruction: Brodit 855719

Angled mount

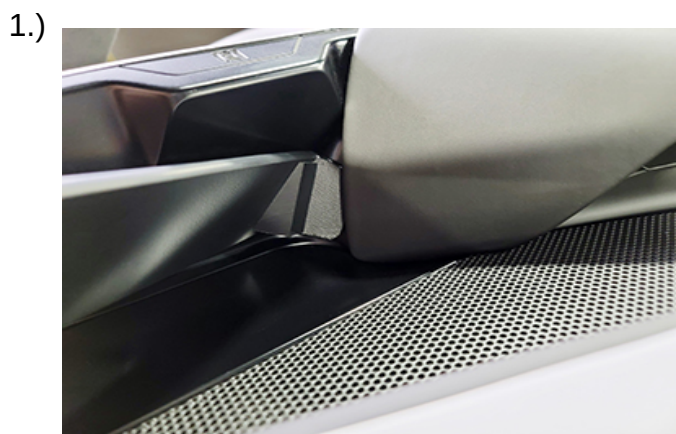

Please read all of the instructions and look at the pictures before attaching the ProClip. It is important to install the ProClip first: any holder & equipment is to be attached after the ProClip is in place.

1. Press the angled edge on the left part of the ProClip into the gap between the instrument hood and the back of the screen.

2. Insert the lip of the ProClip so that it hooks into the instrument hood.

3. Place your thumb on the ProClip faceplate and your fingers on the main bend of the mount. Press forward with your thumb and toward you with your fingers. Hook the right edge of the ProClip around the screen so it grabs the front edge. (Do not pull to the right, it may cause the left edge to pull out from the gap.)

4. The ProClip is in place.