


Manual, Assembly instruction: Brodit 855819

Center mount

1.)

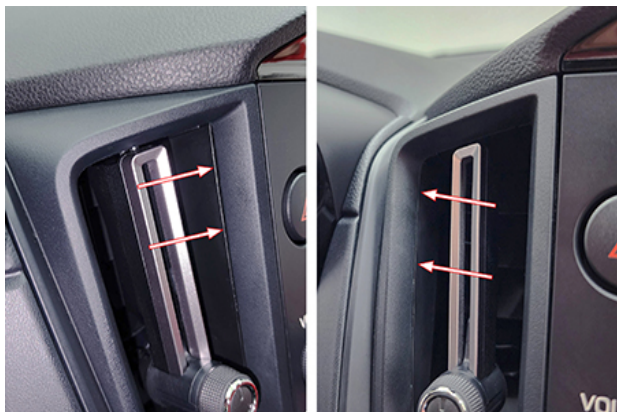

2.)



3.)



4.)



1. Locate the two seams on the inside of the center vent. Gently clean the area where the mount will attach. Remove the adhesive tape covers .

2. Press the angled edge of the mount into the right side of the vent seam, closest to the hazard button.

3. Rotate the mount toward the air vents side, while gently flexing the mount into the left side of the vent seam, closest to the speedometer. The angled edge will click into place in the vent seam.

4. The proclip is in place.