


Manual, Assembly instruction: Brodit 855821

Center mount

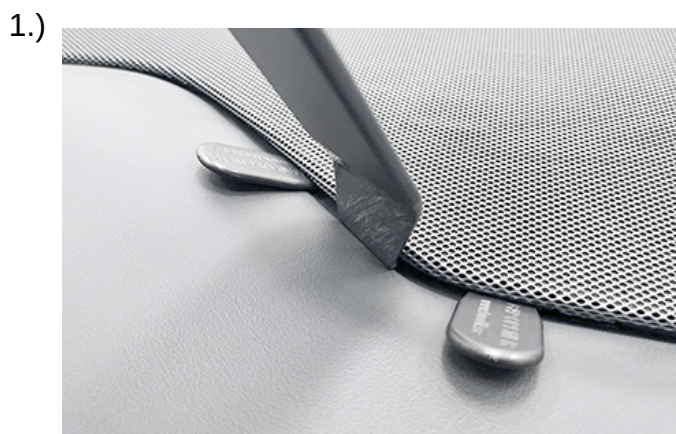

Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the included gap openers, as shown, to lift the edge of the speaker grill on top of the dashboard. Use the enclosed alcohol pad to clean the area where the ProClip is to be installed. Remove the adhesive tape cover on the ProClip. Insert the angled edge of the Proclip under the lifted speaker grill. Then tilt the Proclip down towards the dash so the angled edge slides under the grill.

2. Use your fingers to gently pull the Proclip over the dashboard. The angled edge should slide into the seam between the soft part of the dashboard and the hard trim.

3. Press the Proclip forward to make sure the edge is fully inserted into the dashboard.

4. The ProClip is in place.