

Manual, Assembly instruction: Brodit 855832

Center mount

1.)




2.)



3.)



4.)

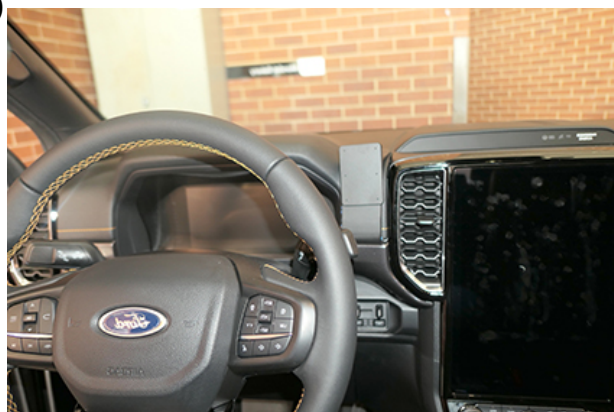

Please read all of the instructions and look at the pictures before installing the ProClip.

1. Insert the angled upper edge of the ProClip into the gap dividing the top part of the dashboard.
2. Press the angled edge all the way into the gap.
3. Pull the lower part of the ProClip toward you and hook the angled lower edge around the edge of the dashboard.
4. The ProClip is in place.